



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Opel Adam (2012-2019)

ADAM DR

SOLARRIDE Zastlonki do OPEL ADAM 2012-2019 KOMPLET 2kg

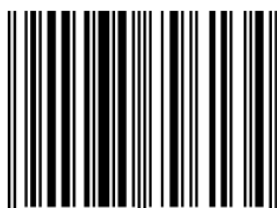

5 904035 796134 >

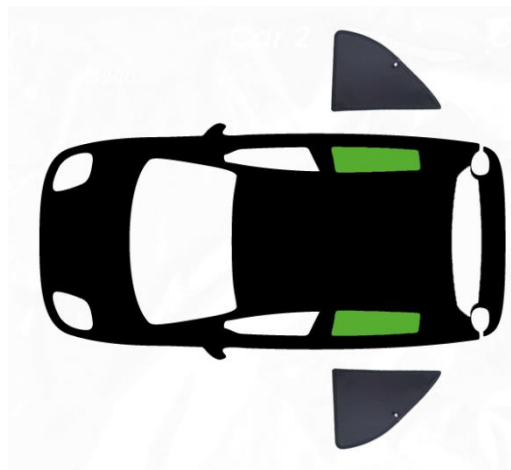

2 x



