



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




**BMW 2 series F45 Active Tourer I
(2014-2022)**

F45 DR

SOLARRIDE Zastlonki BMW serii 2 Active Tourer I (F45) DR 1kg

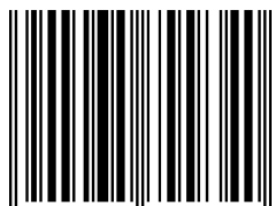

5 904035 799340 >

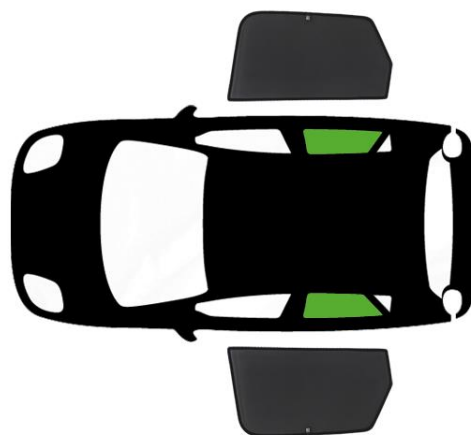

4 x



