



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem

Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž




Ford Focus II Hatchback 5dr (2004-2011)

**FOK2HB 5DR KPL**

SOLARRIDE Zubehör, exklusiv für Volkswagen Ford Focus II Hatchback 5 Dr (2004-2011) Kit 3kg



5 904035 790200 >

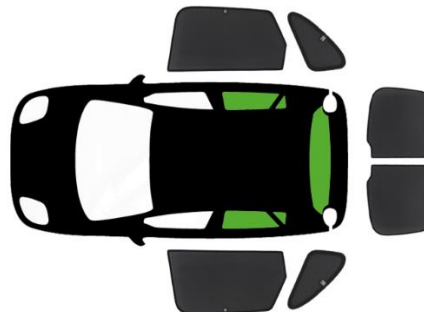

**6 x**



**6 x**







