



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




VW Volkswagen Passat B8 Sedan
(2014-2021)

B8S KPL

SOLARRIDE Zastonki, okony przeciwsłoneczne do VW Passat B8 Sedan (2014-2021) KPL 2lg

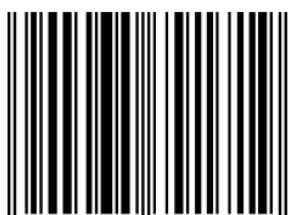

5 904035 791719 >

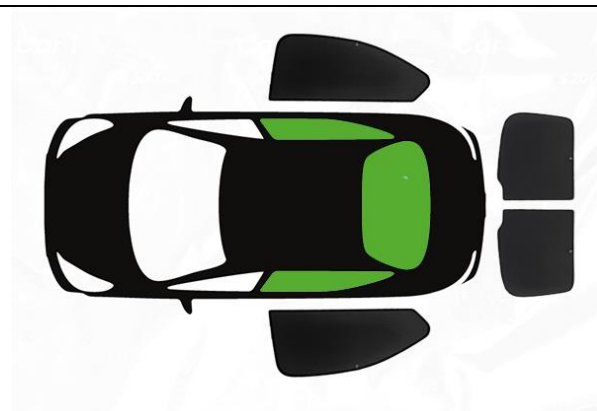

6 x



4 x





