



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Fiat Punto II (1999-2010)

PUNTO II KPL

SOLARRIDE Zaslونki dedykowane do FIAT PUNTO II (1999-2010) KPL 2lg



5 904035 791047 >

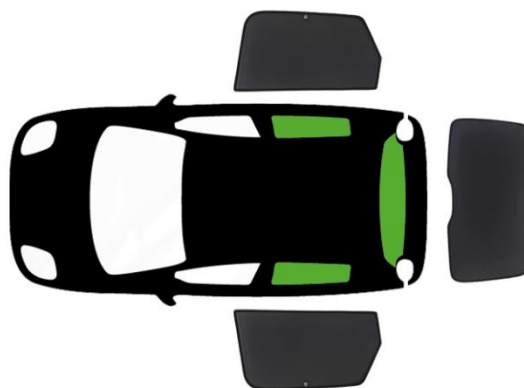

4 x



3 x



