



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Ford Focus II Kombi (2004-2011)

FOK2K DR


SOLARRIDE Zaslonki osłony przeciwsłoneczne Ford Focus II Kombi (2004-2011) DRZWI 1kg





5 904035 795199 >

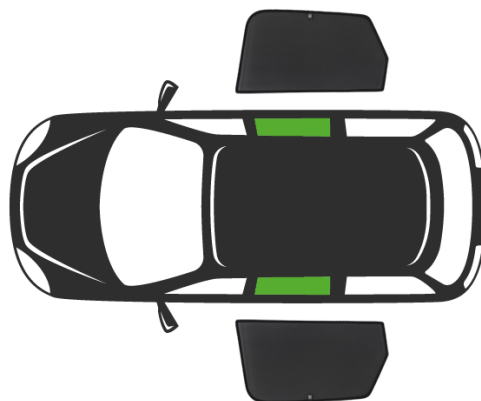

6 x

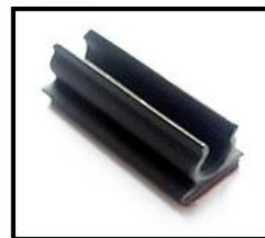

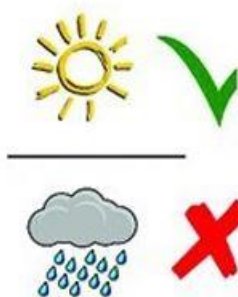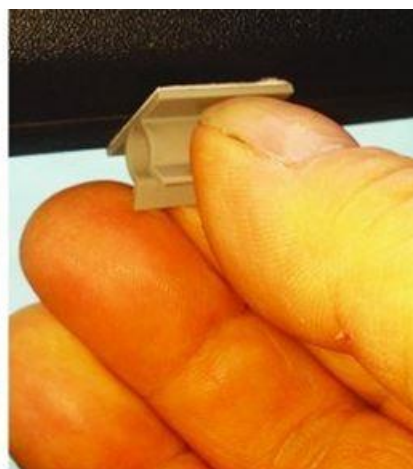

DO NOT TOUCH 24h
NO TOCAR 24h
NIE DOTYKAĆ 24h

