



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



**VW Volkswagen Passat B6 Variant
(2005-2010)**

B6K DR


SOLARRIDE Zakaznik, od którego przeobrażenie do VW Volkswagen Passat B6 Variant (2005-2010) DR 1kg



**VW Volkswagen Passat B7 Variant
(2010-2014)**

B7K DR

SOLARRIDE Zakaznik, od którego przeobrażenie do VW Volkswagen Passat B7 Variant (2010-2014) DR 1kg

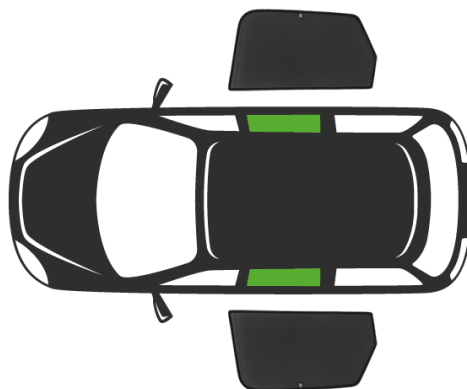

6 x



