



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




**VW Volkswagen Passat B7 Variant
(2010-2014)**

B7K DR

SOLARRIDE System, który pracuje wyłącznie z Solarride dla VW Volkswagen Passat B7 Kombi (2010-2014) DR 1kg

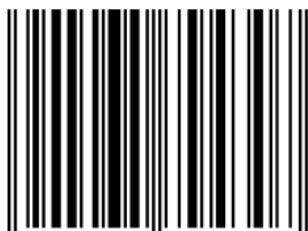

5 904035 794307 >

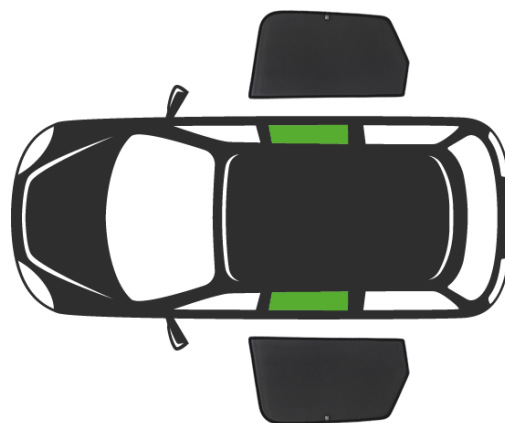

6 x



