



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem

Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž




Fiat Tipo Station Wagon (2015->>)

## TIPOK BEZ KL

SOLARRIDE Zakoník, ochrany proti slunečnému SolarRide do Fiat Tipo Kombi (2015-) BEZ KL, 3kg



5 904035 793553 >

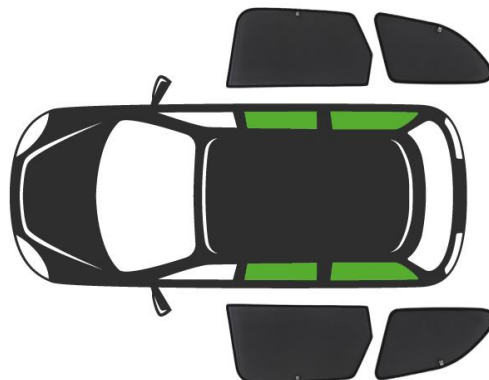

4 x



2 x



