



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem


Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž




Mercedes-Benz C-CLASS S204 Estate  
(2007-2014)

**W204K BEZ KL**


SOLARRIDE Zaslonki do Mercedes-Benz W204 S204 C-Klasa Kombi (2007-2014) BEZ KL 2kg

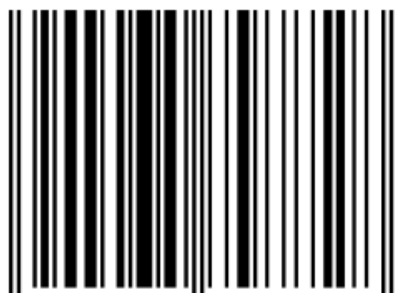

5 904035 797728 >

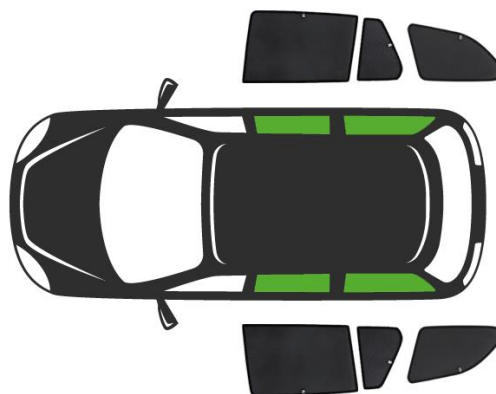

**4 x**

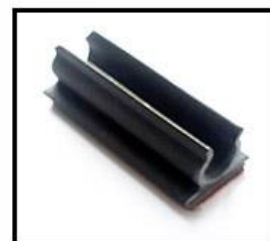

**2 x**



