



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem


Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž



Skoda Octavia I Kombi (1996-2010)

**O1K DR**

SOLARRIDE Casloriki calony priručnikovecne Skoda Octavia I Kombi (1996-2010) CREWM 1kg

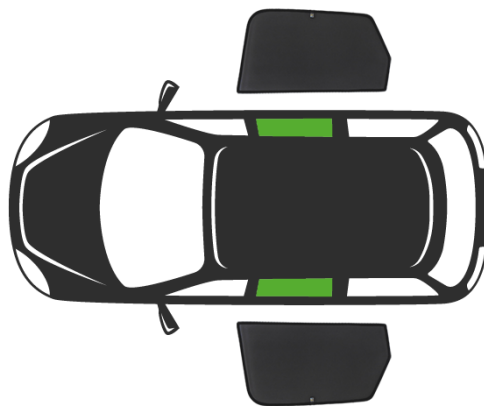

**6 x**



