



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Skoda Fabia I Estate (1999-2008)

FAB1K BEZ KL

SOLARRIDE Zastlonki do Skoda Fabia I I Kombi (2000-2007) BEZ KL, 2lg



5 904035 795670 >

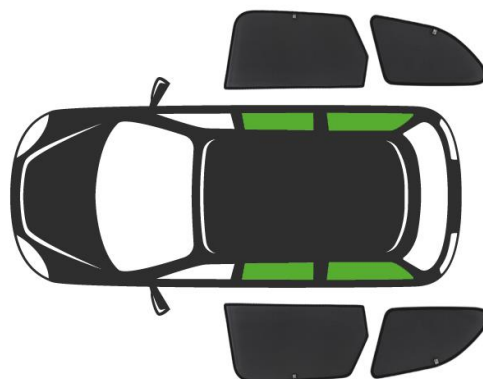

6 x



2 x



