



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Dacia Logan MCV I (2006-2013)

LOGAN MCV I KPL

SOLARRIDE / Zastávka / náčrt / schéma / posrednik / distribútor: Dacia Logan MCV I (2006-2013) KPL, 9g



5 904035 796547 >

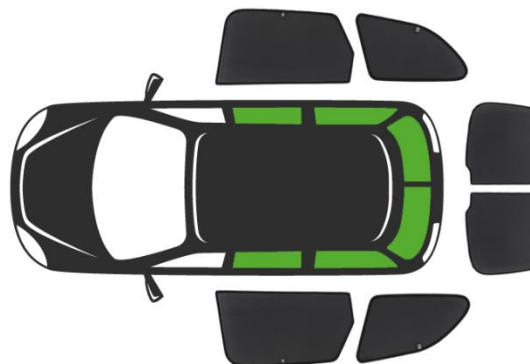

4 x





2 x




8 x




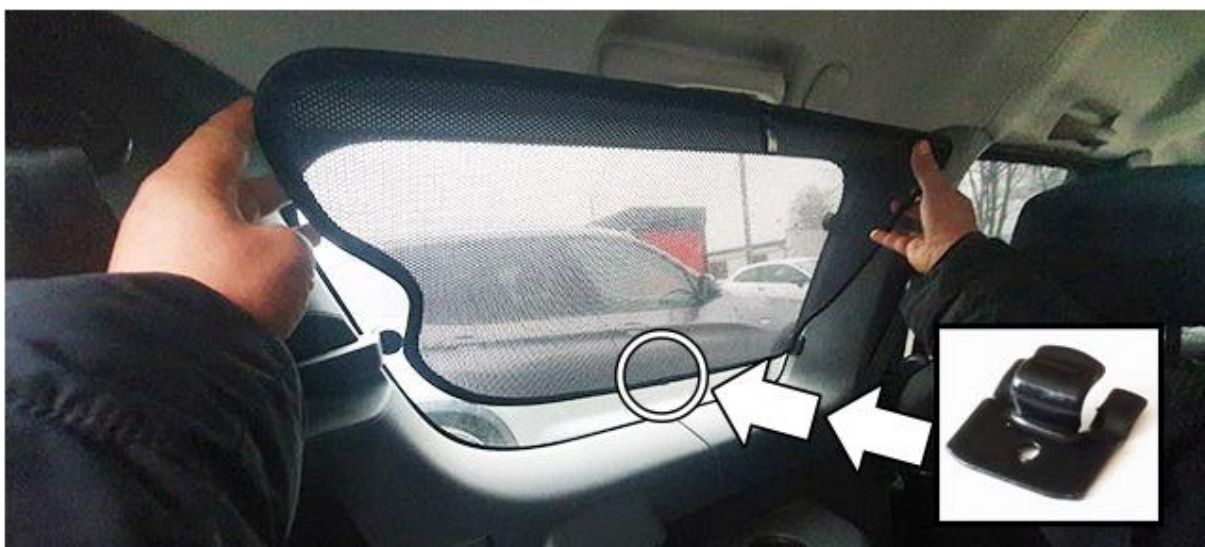

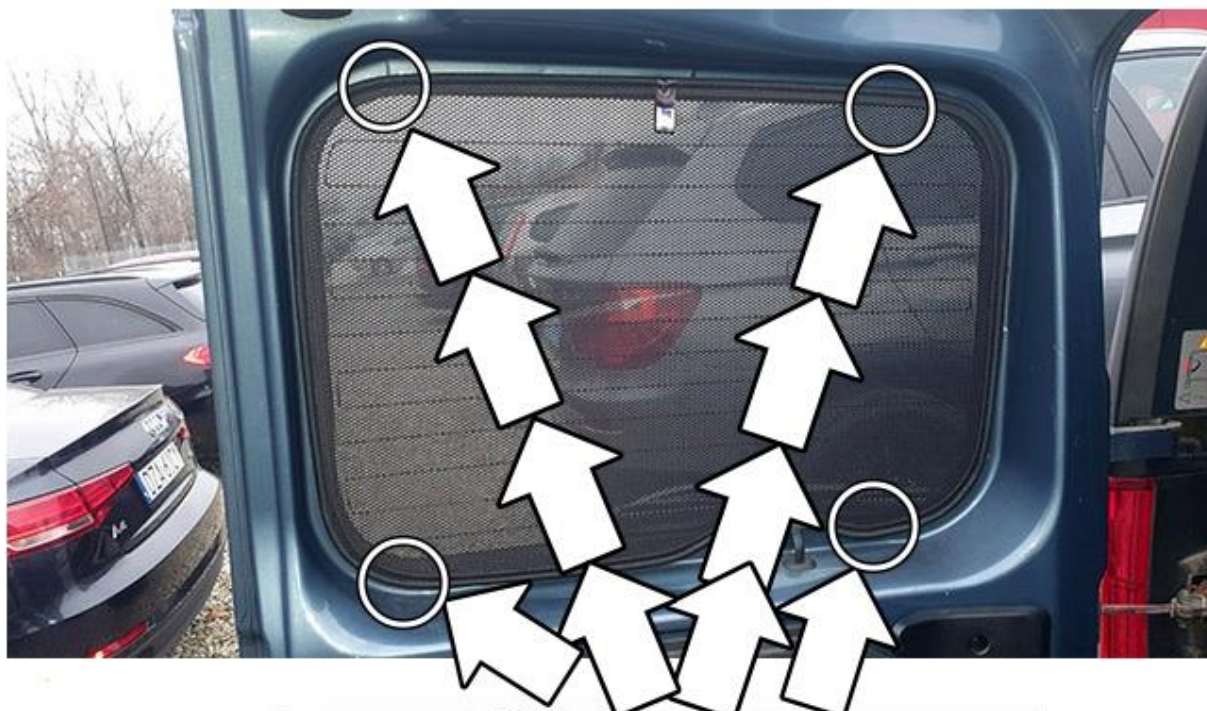

**LUB
ODER
OR
OU
O**

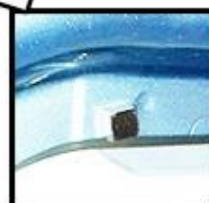

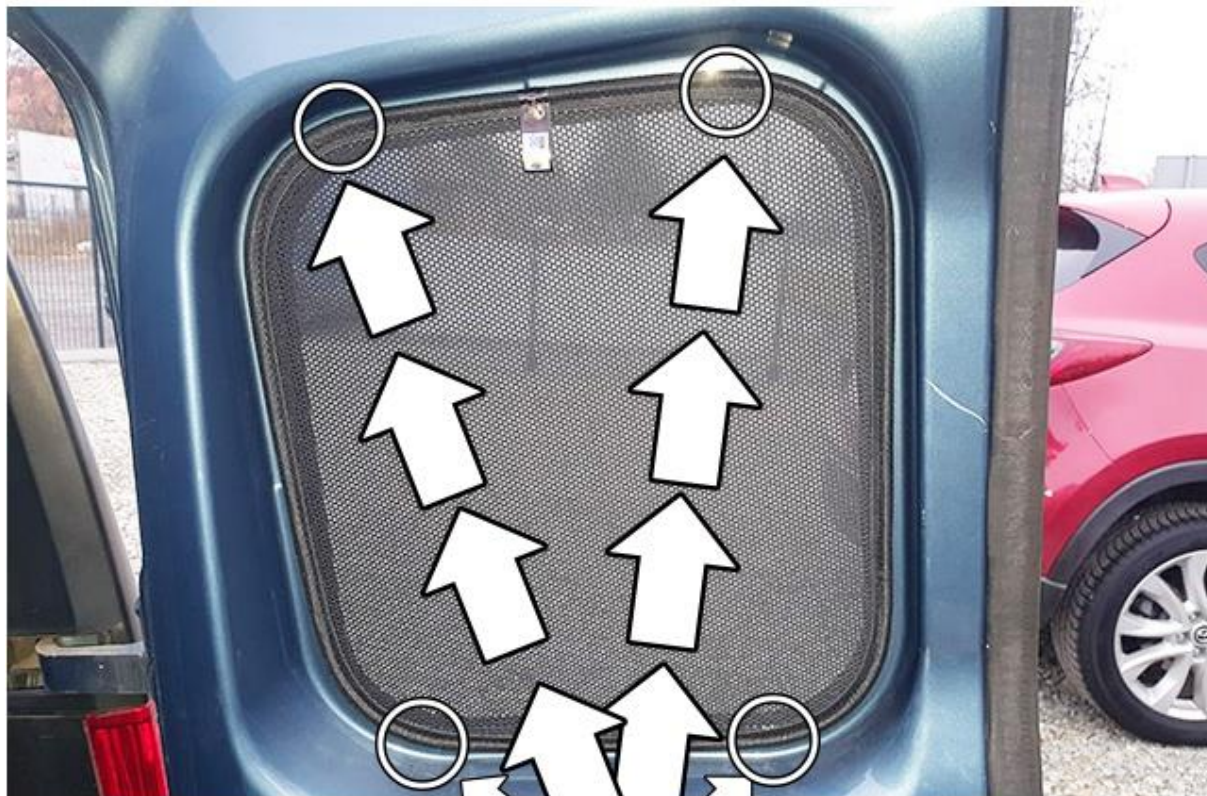

**LUB
ODER
OR
OU
O**

