



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Citroën C5 II Saloon Sedan (2008-2017)

C5S II

SOLARRIDE Zašitní sklony pro motocykle SolarRide-CITROËN C5 II SEDAN (2008-2017) 08 1kg

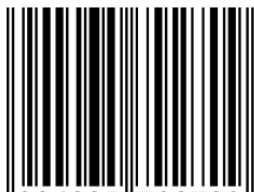


5 904035 792709 >

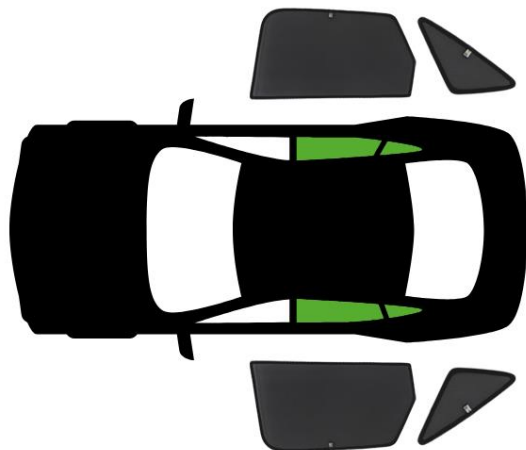

- INSTALACJA NIE WYMAGA KLIPSÓW MONTAŻOWYCH.
- INSTALLATION DOES NOT REQUIRE MOUNTING CLIPS.
- INSTALACE NEVYŽADUJE MONTÁŽNÍ SVORKY.
- DIE INSTALLATION ERFORDERT KEINE BEFESTIGUNGSKLAMMERN.
- L'INSTALLATION NE NÉCESSITE PAS DE CLIPS DE MONTAGE.
- A INSTALAÇÃO NÃO NECESSITA DE CLIPES DE MONTAGEM.
- LA INSTALACIÓN NO REQUIERE CLIPS DE MONTAJE.
- L'INSTALLAZIONE NON RICHIEDE CLIP DI MONTAGGIO.
- ZA UGRADNJU NISU POTREBNE MONTAŽNE KOPICE.
- INSTALAREA NU NECESITĂ CLEME DE MONTARE.
- INŠTALÁCIA NEVYŽADUJE MONTÁŽNE SVORKY.



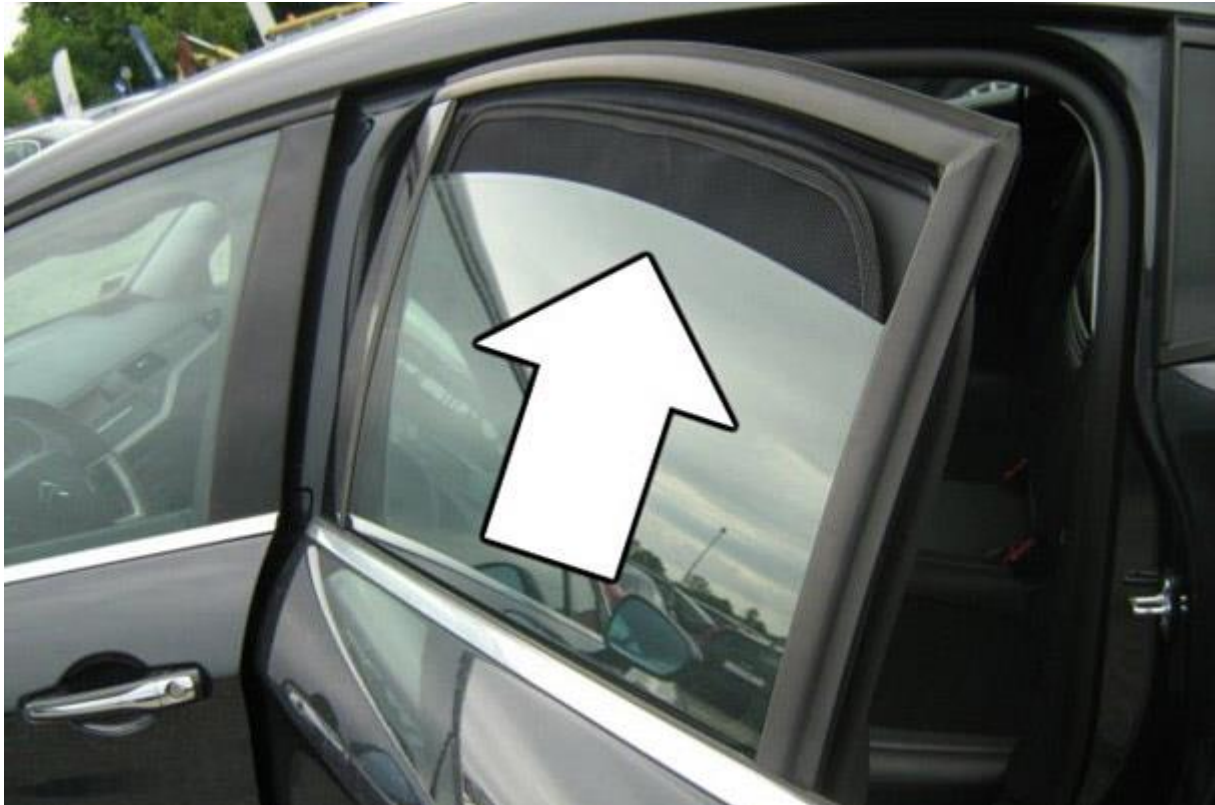



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

