



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem

Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž




Peugeot 2008 I (2013-2019)

**2008 I KPL**

SOLARRIDE Zakonki / róleki / okony przeciwsłoneczne SolarRide do PEUGEOT 2008 (2013-2019) KPL 3g



5 904035 792440 >

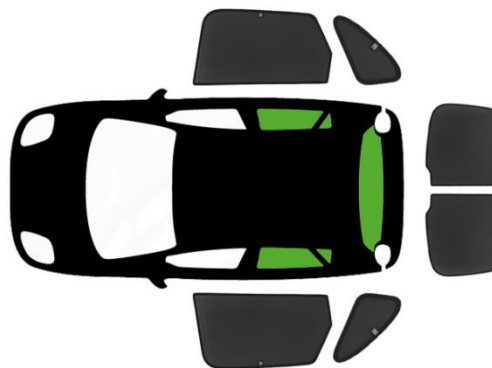

**4 x**



**6 x**

