



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




VW Volkswagen Golf 3 III 5DR
(1991-2003)

G3D DR

SOLARRIDE Zakorki, oskony przeciwkorozyjne do VW Volkswagen Golf 3 (5 Drzwi) (1991-2003) 1kg

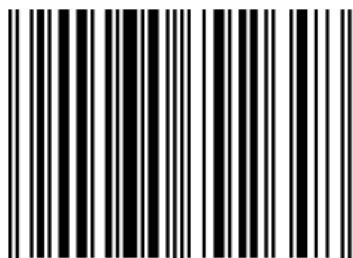

5 904035 792648 >

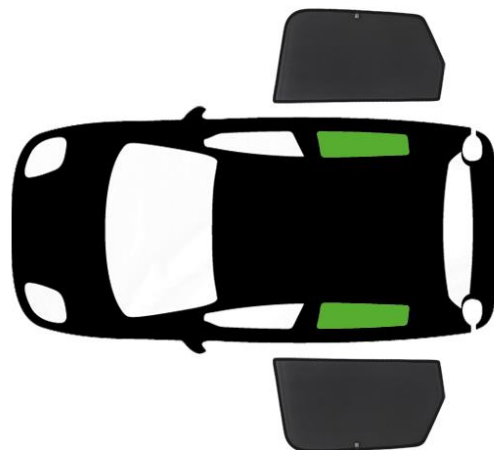

4 x





Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

