



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem

Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž




**BMW 1 series F20 (2011-2019)**

**F20 DR**


SOLARRIDE Zaslonki, oslony przeciwsłoneczne do BMW serii 1 F20 Drzwi (2011-2019) 1kg



5 904035 793539 >

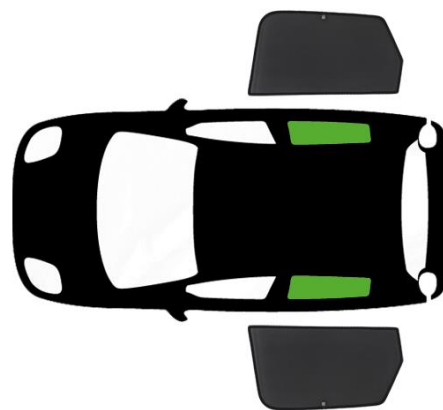

**4 x**

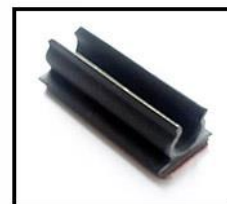

**2 x**





Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem

Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž

