



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem

Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž




Opel Astra H Hatchback 5dr (2004-2014)

**ASTRA H HB KPL**

SOLARRIDE Zakaznik, celiny precizovane do Opel Astra H Hatchback (2004-2014) KPL 3kg



5 904035 796448 >

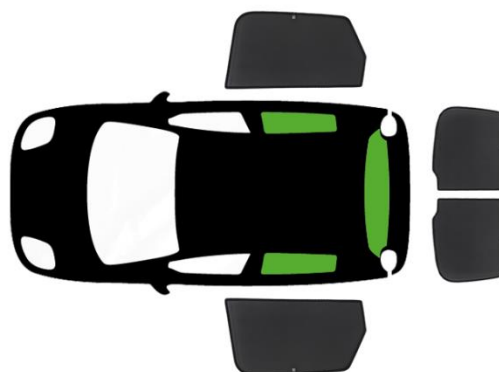

**6 x**



**2 x**





Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem

Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž

