



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



VW ID.3 (2019->)

VW ID.3 KPL


SOLARRIDE ZASŁONKI DEDYKOWANE VOLKSWAGEN ID.3 KPL 2kg



5 904035 790354 >



Videoinstrukcja - zeskanuj kod QR
Videoinstruction - scan the QR code
Video návod - naskenujte QR kód
Instruction vidéo - scanner le code QR
VÍdeo de instrucciones: escanee el código QR
Videoanleitung - Scannen Sie den QR-Code
VÍdeo de instrucciones: escanee el código QR
Instruções em vídeo - digitalizar o código QR
Istruzioni video - scansionare del codice QR

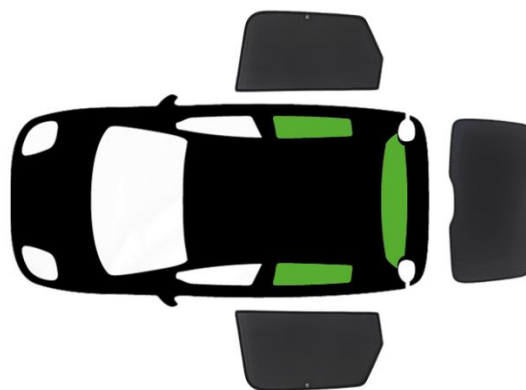

4 x



2 x





