



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




BMW serii 2 F46 Gran Tourer (2014-2022)

F46 KPL

SOLARRIDE Zastonki BMW serii 2 F46 Gran Tourer (2014-2022) BEZ KLAPY 2kg

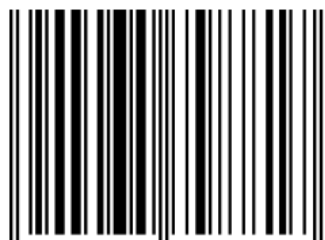

5 904035 798817 >

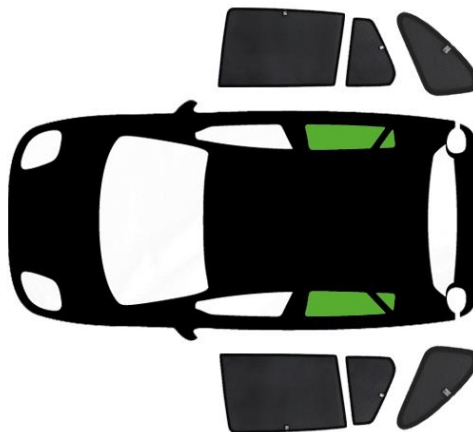


6 x



2 x



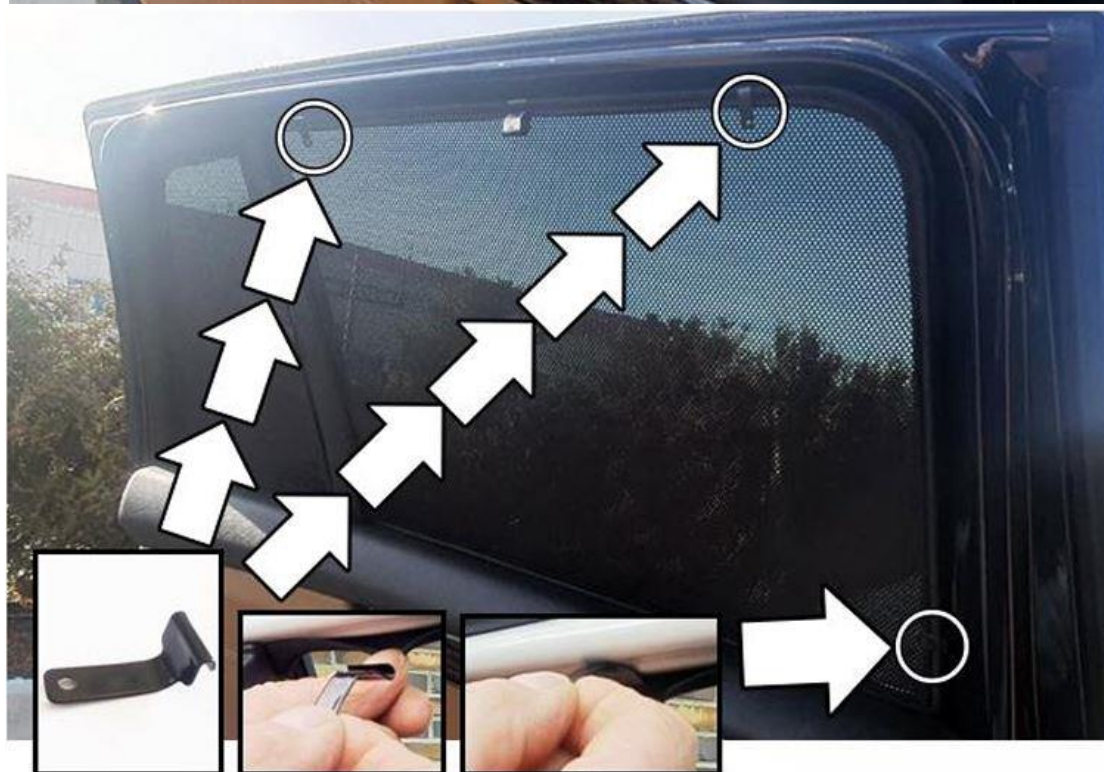



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

