



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




**BMW 2 series F45 Active Tourer I
(2014-2022)**

F45 BEZ KL

SOLARRIDE Zaslónki BMW serií 2 Active Tourer I (F45) BEZ KL 2kg

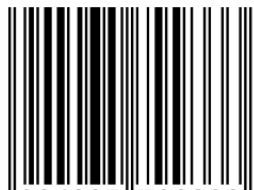

5 904035 799333 >

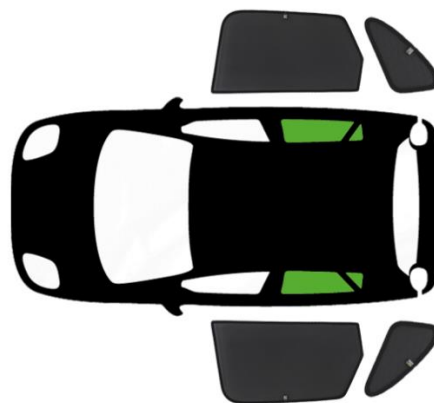

4 x



2 x



