



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Ford Ka+ / Ford Ka 3 III (2016-2020)

FORD KA KPL

SOLARRIDE: Załącznik, okrycie przeciwsłoneczne do Ford Ka+ / Ford Ka 3 III (2016-2020) KPL_2kg

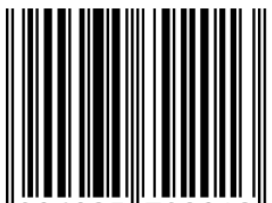

5 904035 792013 >

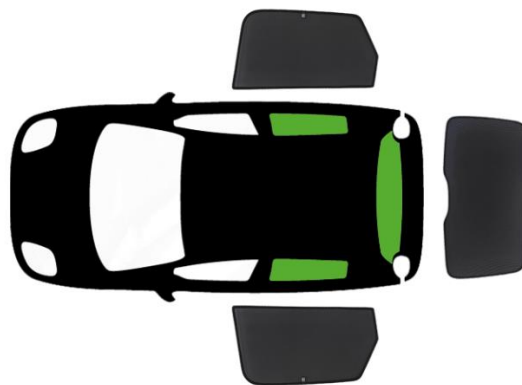

4 x



2 x





