



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Toyota Auris I (2006-2013)

AURIS 1 DR

SOLARRIDE: Zelení roletki oskny przeciwkoneczne SolarRide Toyota Auris I (2006-2013) DR 1kg

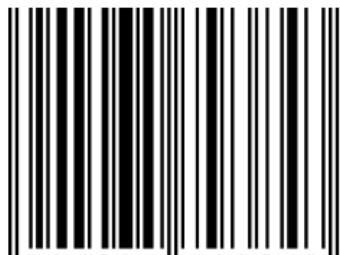

5 904035 793843 >

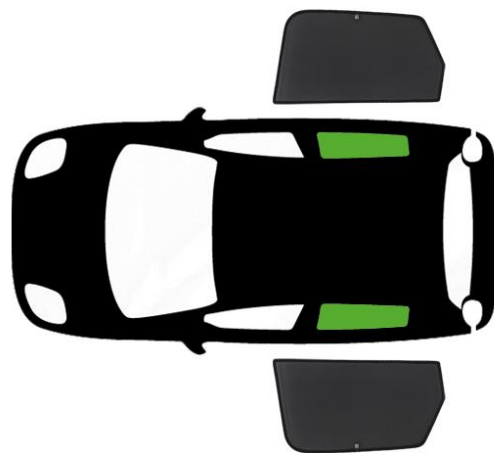

6 x



