



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



Toyota Auris I (2006-2013)

AURIS 1 KPL

SOLARRIDE Żelaznik roletki osłony przeciwsłoneczne SolarRide Toyota Auris I (2006-2013) KPL 2lg

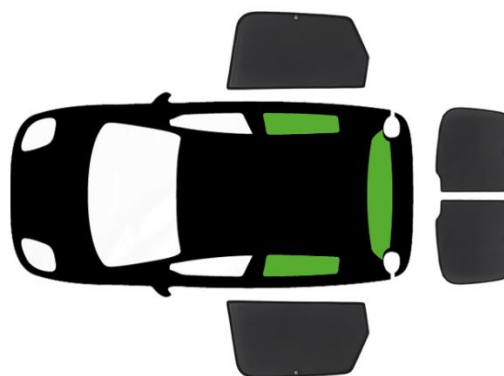

6 x



2 x



