



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem


Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž



**Toyota Auris 2 II Station Wagon / Kombi  
(2012-2019)**

**AUR2K KPL**

SOLARRIDE Zastonki Toyota Auris II Kombi (2012-2019) KPL 3kg

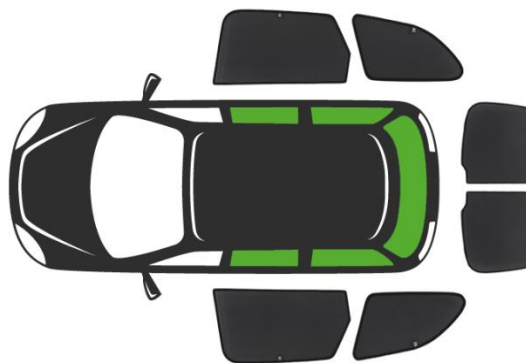

**8 X**



