



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




**Toyota Corolla IX (E120, E130)
(2002-2007)**

COROLLA 9 DR

SOLARRIDE Zastonki, colony preswedenonecne do Toyota Corolla IX (E120, E130) (2002-2007) DR 1kg

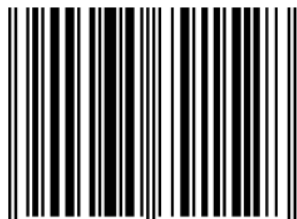

5 904035 791528 >

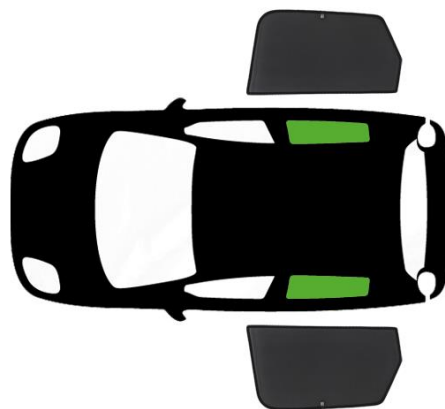

6 x



