



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



**Toyota Corolla 11 XI Sedan (E160)
(2013-2019)**

COR11S KPL

SOLARRIDE Zašitka, osobny pravekolonecne do Toyota Corolla 11 XI (E160) (2013-2019) KPL 3kg

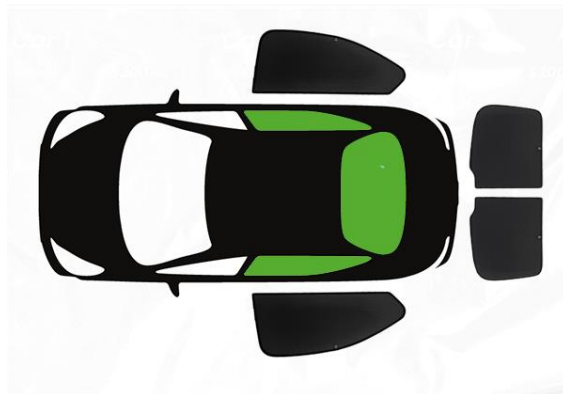

8 x



