



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem


Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž




**Mercedes-Benz C-CLASS S204 Estate  
(2007-2014)**

**W204K KPL**


SOLARRIDE Zasklonki do Mercedes-Benz W204 S204 C-klasa Kombi (2007-2014) KPL, 3kg

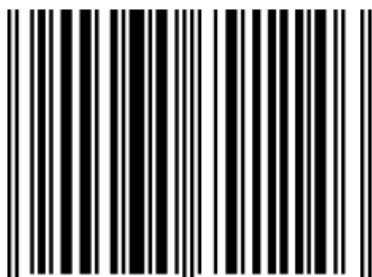

5 904035 791146 >

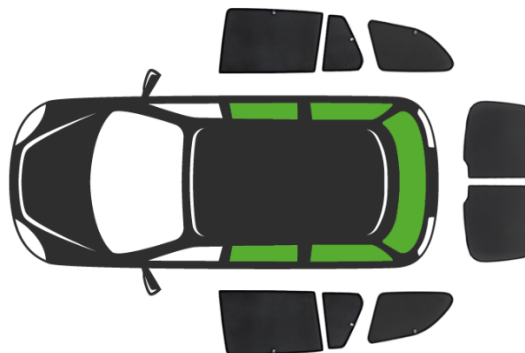

**4 x**

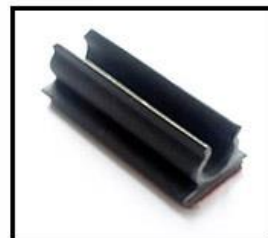

**4 x**



