



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Skoda Superb II Kombi (2008-2015)

SUP2K KPL

SOLARRIDE Zastávky oslony przeciwsłoneczne Skoda Superb II Kombi (2008-2015) KOMPLET 3kg



5 904035 790798 >

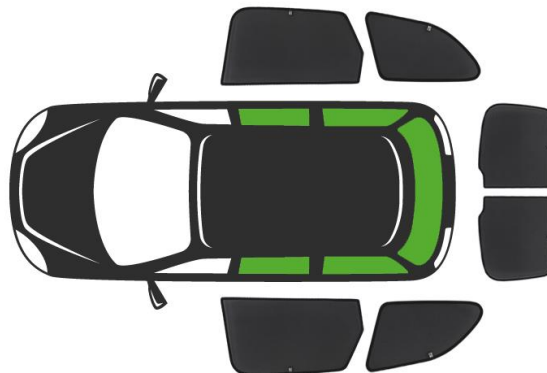

6 x



4 x



