



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem


Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž




Skoda Octavia I Kombi (1996-2010)

**O1K KPL**

SOLARRIDE Zastorvi oštroy prozvidkoneczne Skoda Octavia I Kombi (1996-2010) KOMPLET 3kg

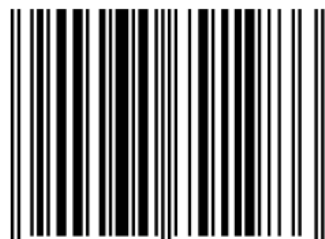

5 904035 791986 >

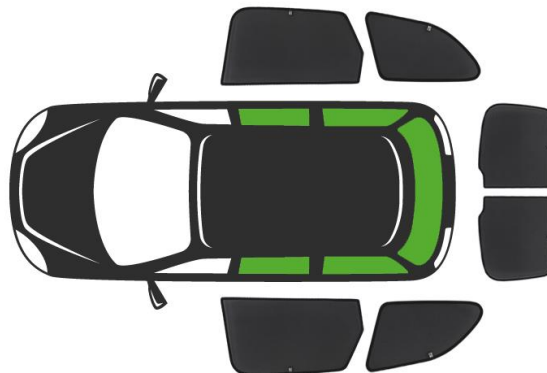

**6 x**



**4 x**



