



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Toyota Yaris I (1999-2005)

YAR 1 DR

SOLARRIDE. Zastírení skoby przeciwkroczne SolarRide do Toyota Yaris I (1999-2005) DR 1lg.



5 904035 791467 >

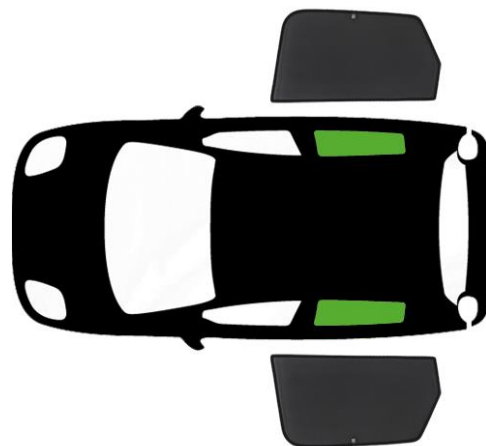

4 x



